

## Fan coil parameter list for MD1001 controller (V2.0)

No.	Meaning	Range	Default	Level
01	target temp. upper limit	16 ~ 205°F	86°F	Factory
02	target temp. lower limit	16~205°F	46°F	Factory
03	target cooling temp.	parameter 02 ~ parameter 01	78°F	End user
04	target heating temp.	parameter 02 ~ parameter 01	68°F	End user
05	Automatic mode target cooling temp.	parameter 02 ~ parameter 01	78°F	Factory
06	Automatic mode target heating temp.	parameter 02 ~ parameter 01	68°F	Factory
07	In heating mode,if the coil temp. is lower than Parameter 07, the fan motor will stop work.	41~104°F	77°F	Factory
08	In cooling mode,if the coil temp. is higher than 68°F, the fan motor will stop work. (1-Yes; 0-No)	0 ~ 1	1	Factory
09	Start the ultra low fan speed (1-Yes; 0-No)	0 ~ 1	0	Factory
10	Is there a water valve (1-Yes; 0-No)	0 ~ 1	1	Factory
11	Is there a floor heating (1-Yes; 0-No)	0 ~ 1	0	Factory
12	Start to use Fahrenheit (1-°F; 0-°C)	0 ~ 1	1	Factory
13	Is it the main controller (1-Yes; 0-No)	0 ~ 1	0	Factory
14	Address	1 ~ 99	15	Factory
15	Lock the button (1-Yes; 0-No)	0 ~ 1	0	Factory
16	When the button is locked, is the remote controller working? (1-Yes; 0-No)	0 ~ 1	1	Factory
17	Is there a password that should be input before locking the button? (1-Yes; 0-No)	0 ~ 1	0	Factory
18	Password 1	0 ~ 99	50	Factory
19	Password 2	0 ~ 99	50	Factory
20	In standby mode,the fan motor will intermittently on and off. (1-Yes; 0-No)	0 ~ 1	1	Factory